Guía de instrucciones rápidas
Guia de uso rápido
Quick Start Guide

1 Installing the player

Windows 2000, ME, XP:

The system will auto-recognise the player. No action is needed.
If converted to the format of MTV , please do as folllowing

Windows 98 systems:

Place the supplied driver disc in the unit.

2 Transferring files

After the MP3 Player is connected to your PC, the following will be displayed on the LCD.

Normal connection,
USB mode

Copy and paste the music to the portable disklie the player.

Press VOL simultaneously and connect to PC by USB ,then you can upgrade.

3 Player Overview

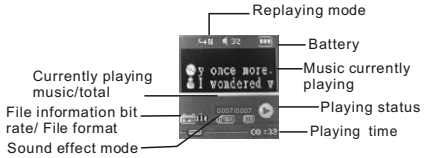

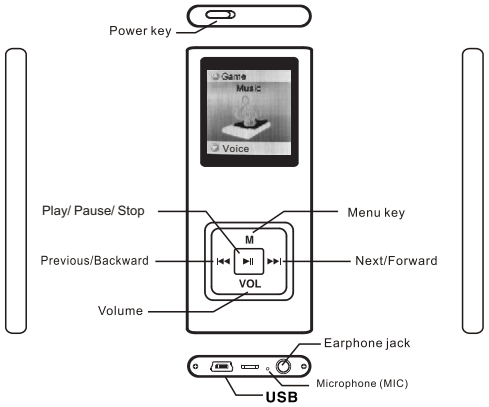

MODE ACCESS

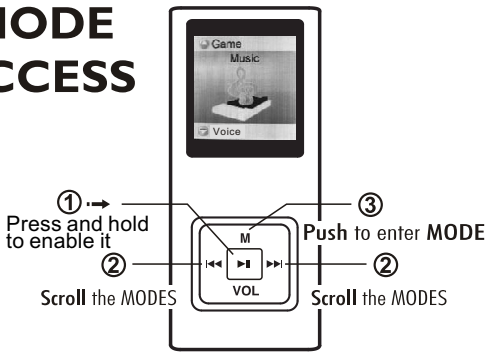

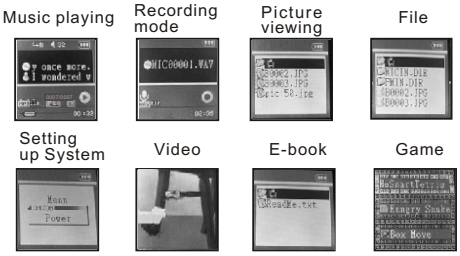

4 Playing Music

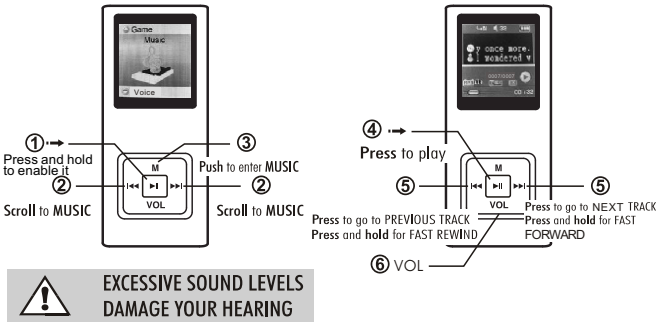
Press and hold to enable it
Push to enter MUSIC
Scroll to MUSIC
Scroll to MUSIC
Press to play
Press to go to PREVIOUS TRACK
Press and hold for FAST REWIND
Press to go to NEXT TRACK
Press and hold for FAST FORWARD
VOL

EXCESSIVE SOUND LEVELS
DAMAGE YOUR HEARING

5 Playback settings

During Music Play

Enter Music Submenu

Choices	Actions
Repeat	→ Use ⏮⏭ keys for No Repeat,One,All,Random All,Dir,Dir Repeat, Dir Random
Equalizer	→ Use ⏮⏭ keys to select Normal; Rock; Pop; Classical; Jazz; Bass;Custom EQ
Tempo	→ Use the ⏭ key to quicken the tempo and the ⏮ key to slow it down.
Replay	→ Use ⏮⏭ keys to set A–B replay and other functions (see User Guide)
Replay Times	→ Use ⏮⏭ keys to set the number of times you want the above selection to be replayed
Replay Gap	→ Use ⏮⏭ keys to set a time interval between replay items
Exit	→ Press MODE key to EXIT and return to the MUSIC menu

6 Playing MTV



⏯ key	Press to play MTV.
MODE key	Long Press into Main menu.
⏮ ⏭ key:	Press to go to PREVIOUS TRACK

7 Voice Recording

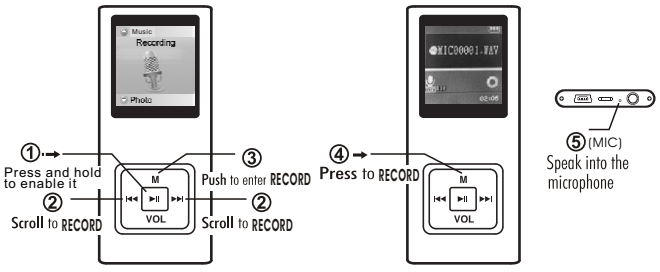

8 Play a Recorded File

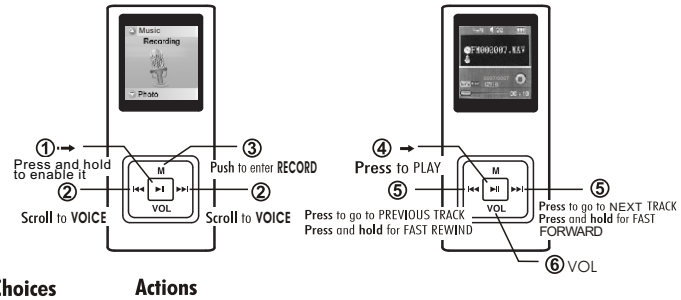
Press and hold to enable it
Push to enter RECORD
Scroll to VOICE
Scroll to VOICE
Press to PLAY
Press to go to PREVIOUS TRACK
Press and hold for FAST REWIND
Press to go to NEXT TRACK
Press and hold for FAST FORWARD
VOL

Choices **Actions**

Repeat → Use ⏮⏭ keys for No Repeat,One,All,Random All,Dir,Dir Repeat, Dir Random

Tempo → Use the ⏭ key to quicken the tempo and the ⏮ key to slow it down.

Replay → Use ⏮⏭ keys to set A–B replay

Exit → Press **MODE** key to EXIT and return to the REPLAY menu

9 PHOTO

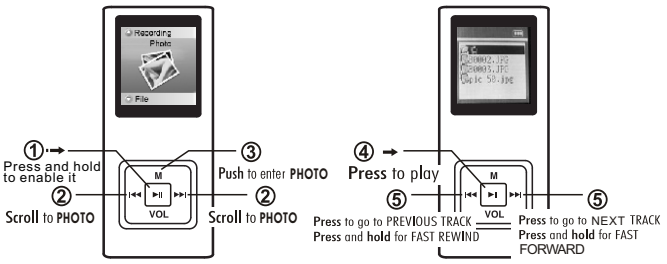
Press and hold to enable it
Push to enter PHOTO
Scroll to PHOTO
Scroll to PHOTO
Press to play
Press to go to PREVIOUS TRACK
Press and hold for FAST REWIND
Press to go to NEXT TRACK
Press and hold for FAST FORWARD
VOL

（Recording time）	Set up the date and time recorded when the file of recorded voice is saved.
（Backlight time）	The time length (seconds) the backlight lasts after it is activated and before any manual operation.
（Backlight mode）	Color backlight setup.
（Language choice）	FR,CH,PT,DU,EN,IT,GR,SP...
（Power off setup）	Set up a time count. When the time is up, the player will be powered off automatically.
（Repeat setup）	Set up a repeat status.
（Contrast setup）	Set up the contrast ratio of the LED.
（Connecting mode）	An option for "Alternative" to divide the USB disk into sections.
（Memory status）	View the capacity and occupancy of the memory.
（Firmware version）	Display the version of the firmware.
（Firmware upgrade）	Dedicated for firmware upgrading.
（Exit）	Exit this interface.

10 SETUP

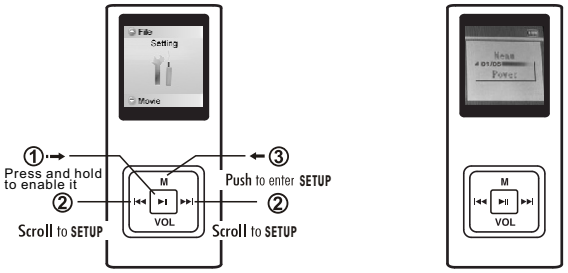

11 Ebook

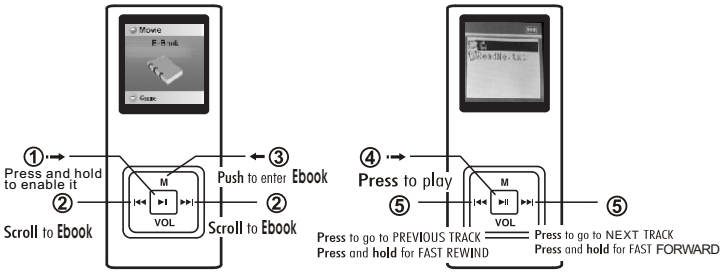
Press and hold to enable it
Push to enter Ebook
Scroll to Ebook
Scroll to Ebook
Press to play
Press to go to PREVIOUS TRACK
Press and hold for FAST REWIND
Press to go to NEXT TRACK
Press and hold for FAST FORWARD
VOL

12 GAME



1.Enter the mainmenu; select "Game",
Press Mode toenter the "Game"

2.Russian Diamond:

- Start the game: press Mode to start
- Speed setup: set upthe speed of thegame
- Exit

13 Specifications:

Item	Specifications	
File formats supported	MP3	MP1,MP2,MP3, WMA,WMV, WAV
	Voice	ADPCM
Earphone output	10mw+10mw	
Radio FM	87.5 MHz-108MHz	
USB cable	USB 2.0 for PC interface	
LCD	1.5 inch colored screen	
Languages supported	FR,CH,PT,DU,EN,IT,GR,SP...	
Size	90X40X8MM	
Weight	45g	
Working temperature	-10℃ －50℃	
Signal/Noise ratio	⩾90dB	
Output distortion	<0.1%	
Output frequency	20HZ-20KHZ	
Recording sampling frequency	8KHZ	

DRIVERS INCLUÍDOS NO REPRODUTOR
DRIVERS INCLUIDOS EN EL REPRODUCTOR
DRIVERS INCLUDED IN PLAYER